

# Quick Start Guide


## PTFE/Fiberglass Tape

### 1 Clean Surfaces




Before applying tape, remove dust, grease and dirt with a cloth and alcohol, or tack cloth.

### 2 Apply to Tape

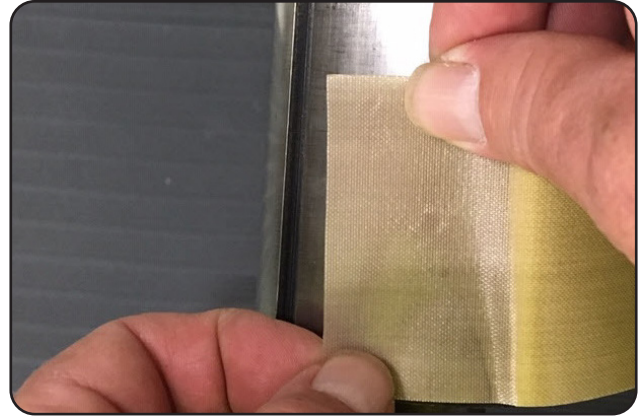

Remove approximately 2 inches of liner and apply to surface.

### 3 Peel Back Liner

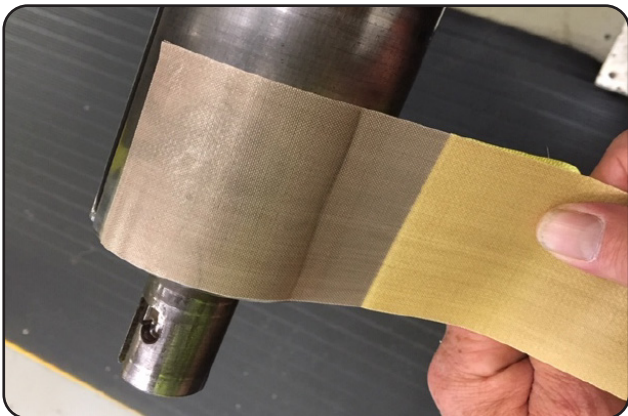

Carefully remove liner while smooth across surface, avoiding wrinkles and removing any bubbles.

### 4 Cover Required Surface



Continue to apply tape until surface is completely covered and smooth.