

Quick Start Guide


PTFE/Fiberglass Tape

1 Clean Surfaces




Before applying tape, remove dust, grease and dirt with a cloth and alcohol, or tack cloth.

2 Apply to Tape

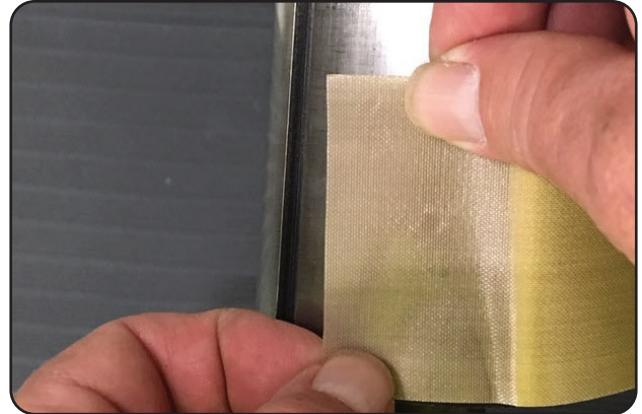

Remove approximately 2 inches of liner and apply to surface.

3 Peel Back Liner

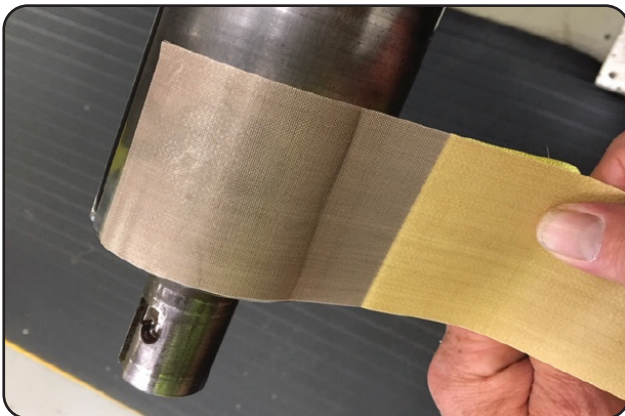

Carefully remove liner while smooth across surface, avoiding wrinkles and removing any bubbles.

4 Cover Required Surface



Continue to apply tape until surface is completely covered and smooth.